

USER'S MANUAL (IFU)

DIGITAL HOME UPS 250VA/12V

Salient features

- ◆ Micro controller based technology using MOSFETs
- ◆ Fuzzy logic control - a unique & advanced technology
- ◆ Smart overload sense and short circuit protection
- ◆ Automatic low battery cutout
- ◆ PWM controlled efficient fast charging
- ◆ Great power saving
- ◆ User-friendly LED indication

GLOBAL CERTIFICATIONS:

ISO 9001 : 2000
ISO 14001:2004

R&D
Recognised
by
MINISTRY OF SCIENCE & TECHNOLOGY
GOVERNMENT OF INDIA

Before connecting, operating, or adjusting this unit, please read this instruction booklet carefully .

Customer Care : +91 124 4170561-566

Dear Customer,

Congratulations for choosing Su-Kam Digital Home UPS! This Digital Home UPS has been developed using state-of-the-art Micro controller based technology.

Some of the distinguishing features of the Su-Kam Digital Home UPS :

<ul style="list-style-type: none"> ◆ Micro controller based technology using MOSFETs ◆ Fuzzy logic control-a unique & advanced technology ◆ Smart overload sense and short circuit protection ◆ Automatic low battery cutout 	<ul style="list-style-type: none"> ◆ PWM controlled efficient fast charging ◆ Great power saving ◆ User-friendly LED indication
----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------	------------------------------------------------------------------------------------------------------------------------------------------------------------------

This manual will help you to better understand your Digital Home UPS , increase your convenience in using it and maximize its benefits for you..

Feel free to contact our authorized dealer or us at **info@su-kam.com** or visit our website **www.su-kam.com** anytime for any clarification or more information. We value your suggestions and comments. Su-Kam is committed to continual product improvement and feel the best way to accomplish this task is by listening our valued customers. This commitment gets strengthened every time you buy a Su-Kam product.

We appreciate the support you have shown us through the purchase of our product. Please read this manual to become familiar with its features and various applications.

Regards,
Su-Kam Power Systems Limited

CONTENT


❁	KNOWING YOUR HOME UPS	
	(A) FRONT PANEL.....	1
	(B) BACK PANEL.....	2
❁	IMPORTANT SAFETY INSTRUCTIONS.....	3
❁	SPECIAL NOTICES.....	4
❁	TROUBLE SHOOTING.....	5
❁	TECHNICAL SPECIFICATIONS.....	6-7
❁	WARRANTY CARD.....	8

KNOWING YOUR HOME UPS

Now lets begin the journey to explore various aspect of your Su-Kam Digital Home UPS. Welcome aboard!

In its most basic form, Home UPS transforms Direct Current (DC) to Alternating Current (AC). The battery bank with the Home UPS acts as a reservoir to ensure continuous supply of power whenever mains supply from utility power is not available.

FRONT PANEL:

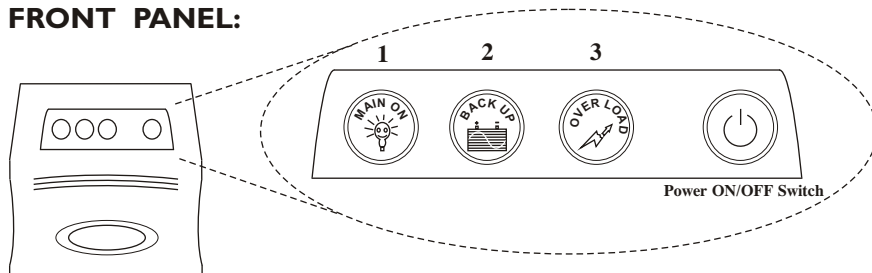

LED 1	MAINS ON / BATTERY CHARGING / FUSE BLOWN
LED 2	BACKUP MODE / LOW BATTERY
LED 3	OVER LOAD / SHORT CIRCUIT

LED Indications:

LED	CONTINUOUSLY ON	BLINKING	
		SLOW	FAST
1	Incoming Mains available Battery Charged	Incoming Mains available Battery Charging	Mains Fuse Blown (Load exceeds specified limit of Home UPS)
2	Incoming Mains Fail Backup Mode	Low Battery (Home UPS will shut down automatically after few minutes)	—
3	Overload	—	Short Circuit


BACK PANEL:

The Digital Home UPS has two battery wires coming out from the rear side, a Fuse holder, 1 Push Button, an output Socket and an input mains or 3 way cable. Connect the two battery wires to the terminals of the battery, the red colored to positive terminal and the black colored to the negative. A three core input cable is used to connect the home UPS to incoming AC Mains. Ensure that incoming phase (or line) is connected to line (Red wire), neutral is connected to neutral (Black Wire) and earth is connected to earth (Green Wire). After this the load is connected through the output socket at the rear of the Home UPS.

Note : Press the Push Button (4) at the rear panel of the Home UPS for Narrow window (UPS) mode if you want to run PC load otherwise keep the button unpressed for Wide Window(WUPS) mode.

REAR VIEW:

1. 3 Core Input Wire (Mains Input for Home UPS).
2. 6A AC Output Socket.
3. F2.5A/250V (Fast Blow) Mains Input Fuse
4. Push Button for Narrow Window(UPS) /Wide Window (WUPS) mode.
5. Battery Wires 3 Sq.mm

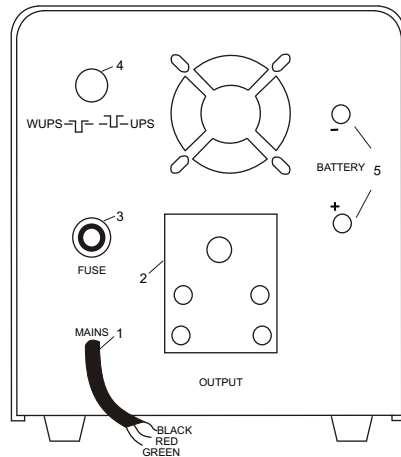

IMPORTANT SAFETY INSTRUCTIONS

Before proceeding further kindly go through the safety instructions carefully.

General Precautions:

1. Before using the Home UPS read all instructions and cautionary markings on the Home UPS, the Batteries, all appropriate section of this instruction manual.
2. Do not expose Home UPS to rain, liquids of any type. The Home UPS is designed for interiors only.
3. Do not disassemble the Home UPS, take it to a Su-Kam Engineering Service Centre when service or repair is required. Opening by unqualified personnel entails electric shock or fire hazard.
4. To reduce risk of electric shock, disconnect all wiring before cleaning.

5. Warning-Risk of Explosive gases

WORKING IN THE VICINITY OF A LEAD ACID BATTERY MAY BE DANGEROUS. BATTERIES GENERATE EXPLOSIVE GASES DURING NORMAL OPERATION.

Provide ventilation to outdoors from the Battery compartment.

6. Do not cover your Home UPS with any cover or cloth.
7. Do not install this Home UPS on or near flammable materials (plywood, Chemicals, gasoline etc.).
8. Be extra cautious when working with metal tools on and around batteries. It could short-circuit the batteries or other electrical parts, producing a spark that could cause an explosion.
9. Remove conductive jewelry such as rings, bracelets, necklaces, and watches when working with a battery. A battery can produce a short-circuit current high enough to weld a ring or causing severe burns.

IMPORTANT PRECAUTIONS:

The output side of the Home UPS AC wiring should never be connected to a generator or incoming utility power. This condition is far worse than a short circuit. If the unit survives this condition, it will shut down until correction is made.

Note : Never disconnect the battery cables while the Home UPS is delivering power or battery charger is operating. The Power Active Switch has no effect on the charger; it turns off only the power output during backup mode. To disconnect the batteries for service:

- (a) turn off the power switch.
- (b) disconnect all AC power.
- (c) disconnect all the battery cables.

Special Notices:

- **Do not connect** heavy load like Refrigerator, Motor, Cooler, etc with Home UPS.
- Avoid connecting the stabilizer between utility power and Home UPS. The AVR of stabilizer may cause your computer to reboot.
- We recommend that you have point to point wiring of the Home UPS.
- **GROUNDING INSTRUCTIONS:** This Home UPS must be connected to a grounded, permanent wiring system.

TROUBLE SHOOTING

Symptoms	Rectifications
Main Power is coming. Home UPS shows mains fuse blown on its display panel	Reduce the load and replace the glass fuse of specified rating given at the rear side of the Home UPS.
No Power during backup mode	Check if low battery LED is glowing, switch OFF the Home UPS by power active switch. Allow the battery to charge before running the Home UPS on battery again.
	Check if overload/short circuit LED is glowing. Reduce load and reset the Home UPS by Power Active switch.
Home UPS does not operate	Check the battery connections.
Home UPS trips frequently at back up mode	Reduce the load and restart the Home UPS through the power active switch.

Symptoms	Problem	Remedy
There is no output power	Low Battery	Check condition of batteries & recharge
	Loose or corroded battery connections	Check and clean all connections
	Loose AC output connections	Check all AC output connections
System shut down after 20 sec, no display	Output of Home UPS is wired back to its own input	Check the proper AC input and output wiring
Low/High AC output voltage	Measuring with the wrong voltmeter	Meter must be a true RMS reading meter
Low surge power	Weak batteries or battery cables too long	Refer to cable and battery recommendations in this manual

TECHNICAL SPECIFICATIONS

MODEL	MICRON
CAPACITY	250VA/12V

VOLTAGE LIMITS (NARROW WINDOW-UPS MODE)

Mains A.C. Low Cut	185 ± 10V
Mains A.C. Low Cut Recovery	190 ± 10V
Mains A.C. High Cut	265 ± 10V
Mains A.C. High Cut Recovery	260 ± 10V

VOLTAGE LIMITS (WIDE WINDOW-WUPS MODE)

Mains A.C. Low Cut	105 ± 10V
Mains A.C. Low Cut Recovery	120 ± 10V
Mains A.C. High Cut	285 ± 10V
Mains A.C. High Cut Recovery	270 ± 10V

OUTPUT PARAMETER

Mains Output Frequency	Same as Input (45Hz-55Hz)
Output Frequency	50.0 Hz. ± 0.1 Hz
Output Voltage with Full Load	220V/200V ± 10V
Overload	Above 110%
Short Circuit Protection	>250% Load (Few msec)

BATTERY CHARGING

Microcontroller based Controlled Triac charging with Soft start over full range of mains 130V to 290V	
Maximum Charging Current Limit	5.0 ± 1.0 Amp
Charging Boost Voltage	13.9V ± 0.2V
Charging Float Voltage	13.6V ± 0.2V
Battery Lower Voltage Limit	10.2V ± 0.2V
Recommended Battery Capacity	45AH-65AH/12V
Number of Batteries	1

TECHNOLOGY

Microcontroller based state-of-the-art technology using MOSFETs
Fuzzy Logic Control Technology

ENVIRONMENT

Storage Temp.	0-50°C
Operating Temp.	0-40°C
Humidity	0-90% Non-condensing

Dimension (W X D X H) in mm	118 X 180 X 150
Weight (Kg)	4.1 Kg

Note: Specifications subject to change without prior Notice

REV. 05-04-08

*Technical
Specifications*

(7)

WARRANTY CARD

- ★ **SU-KAM POWER SYSTEMS LIMITED** warrant to the original purchaser provided the product is still in possession of and used by the original purchaser from the date of purchase.
- ★ The warranty stands on all parts (except LED's, switches and external body) for a period of **1 year**.
- ★ The warranty will not apply to defects arising in company's opinion by reasons of accident, abuse, misuse, neglect, improper installation (if not undertaken by the company or its representative), fire, flood, or other act of GOD and any other natural calamities and any other unauthorized repairs done or carried out will have to be borne by the purchaser. The problem of fuse blown will not be included in the warranty of the product. The services given for the same will be paid service.
- ★ The company in no way will be held liable for any loss or injury or damage caused to life or property or death and disability caused to any form of life for any reason whatsoever.
- ★ All disputes are subject to jurisdiction of Delhi only.

Model No. : _____
 Serial No. : _____
 Name of Purchaser : _____
 Address : _____
 Date of Purchase : _____
 Dealer's Name : _____



SU-KAM OFFICES ADDRESSES

BANGALORE
H.No.449, Ground Floor, 7 th Cross,
6th Main, MICO Layout, BTM II Stage,
Bangalore 560076
Karnataka
Tel.: 080-32961610, 41506332
E-mail : bangalore@su-kam.com

BHUBANESHWAR
389, Bomikhal, Cuttack Puri Road,
Bhubaneswar- 751006
Orissa
Tel.: 0674-2585120, 09937014979

CHANDIGARH
SCO-215-217, 3rd Floor,
Office No. 302,
Sector-34 A,
Chandigarh-160019
Tel.: 0172-4648509, 09878694005
E-mail: chandigarh@su-kam.com

CHATTISGARH
Flat No. 1, Govind Kunj,
Civil Line, Near Jabal Fabricator,
Raipur-492001
Chattisgarh
Tel.: 0771-3209092, 09981541645

CHENNAI
Old No. 87 & New No-23,
Valluvar Salai, Arumbakkam
Chennai- 600106
Tel: 044-32984497, 09952966135,
09940634442
E-mail: chennai@su-kam.com

COCHIN
Door No-27/77; Plot No-188,
8th Cross Road Girinagar,
Cochin, Emakulam-682020, Kerala
Tel: 0484-2316141, 09995882575
Fax: 0484-2316141
E-mail: cochin@su-kam.com

DEHRADUN
Wedwalla, Ward No-15, Bhusa Store,
Near Shiv Mandir, Sharanpur Road,
Village & P.O. Majra,
Deharadun-248001
Uttarakhand
Tel: 09999399605
Email: dehradun@su-kam.com

DELHI
WZ-1401/02, Nangal Raya,
Near Lajwanti Garden,
New Delhi-110046
Tel: 011-32560709, 32533361,
09971497598
Email: delhieservicecenter@su-kam.com

GHAZIABAD
13/7, Site No. 3,
Meerut Road, Industrial Area-3,
Near Uttam Toyota,
Ghaziabad-201001
Uttar Pradesh
Tel: +91-120-3239910, 9810434566,
9997797852
E-mail: ghaziabadservice@su-kam.com

VADODARA
203 Padmavati Complex,
Shrenik Park Char Rasta,
BPC Road, Akota,
Vadodara-390020
Tel: 0265-3206250, 09974555280
E-mail: vadodara@su-kam.com

HYDERABAD
Plot No. 81, Syndicate Bank Colony
West Marredpally,
Secunderabad-500 026
Andhra Pradesh
Tel.: +91-40-27717628, 09959778881
E-mail: hydservice@su-kam.com

INDORE
F-47, MIG Colony,
Near Cristean Eminent School,
Indore 452001
Madhya Pradesh
Tel: 0731-3204887, 09993590245
E-mail: indore@su-kam.com

JAIPUR
206, Adarsh Plaza Khasa,
Kothi Crossing, SJS Highway,
Jaipur
Rajasthan
Tel: 0141-4016625, 09878694005
E-mail: jaipur@su-kam.com

JAMMU
Malik Market, Channi Rama,
Bye Pass Road,
Jammu - 180004
J&K
Tel: +91 9906908470, 9906905009
E-mail: jammu@su-kam.com

KANPUR
403, 404 Gopala Chamber
4th Floor, Parade,
Kanpur
Tel: 09956295691
Email: kanpur@su-kam.com

KOLKATA
8th Floor, Room No-14,
Shanti Niketan Building,
8 Camac Street,
Kolkata-17,
West Bengal
Tel: 033-32963664, 09903114026
Email: kolkata@su-kam.com

MUMBAI
15, RNA Arcade, 1st Floor,
Cross Lane No. 3,
Lokhandwala Complex,
Andheri (West),
Mumbai - 400058
Email: mumbaiservice@su-kam.com
Tel: 022-40166900
Fax: 022-40166905

NAGPUR
R-2, Near 8 Rasta Chowk,
Laxmi Nagar,
Nagpur-440022
Tel: 0712-3292752, 09975496264
Email: nagpur@su-kam.com

PATNA
D-3, Jula Niketan,
West Boring Canal Road,
Anand Puri,
Patna-800001,
Bihar
Tel: 0612-3200776, 09934015347
Email: patna@su-kam.com

PUNE
940, 2nd Floor, Synagogue Street,
Near Railway Reservation Centre
Camp,
Pune-1, Maharashtra
Tel: 020-32303900, 30523788,
09975496268
Email: pune@su-kam.com

RANCHI
74/D, Plot No. 1,
Park Road 3,
Ashok Nagar,
Ranchi-834002
Jharkhand
Tel: 0651-3203277, 09934015338
Email: ranchi@su-kam.com